1. Register your Skybox
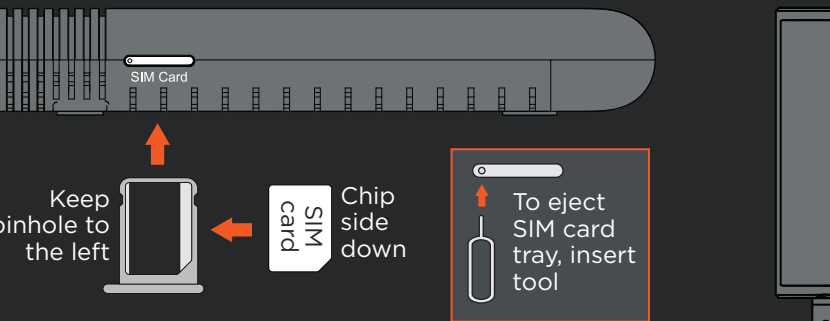

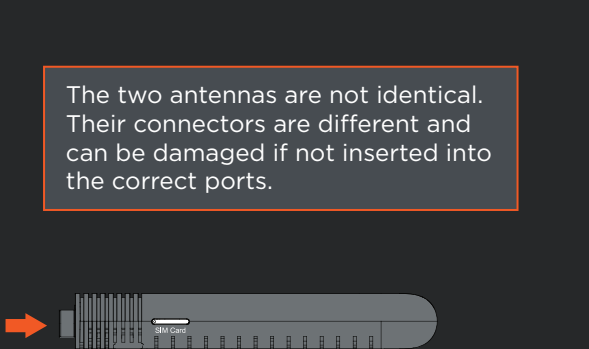Visit www.skybox.com/support/setup to register your Skybox. This page also has step-by-step instructions, setup videos, FAQs and other helpful information for first-time users. Scan this QR code to jump to the page.

2. Install SIM card

SIM Card

Keep pinhole to the left

Chip side down

SIM card

To eject SIM card tray, insert tool

If your Skybox did not come with a pre-installed SIM card, then eject the SIM card tray by inserting the provided tool into the pinhole. Insert a nano SIM card with a data plan into the tray. Keeping your Skybox flat on a table, carefully replace the tray, keeping the pinhole on the left side.

3. Install 4G and Wi-Fi antennas

The two antennas are not identical. Their connectors are different and can be damaged if not inserted into the correct ports.

Install antennas on the Wi-Fi and LTE-P antenna inputs, paying careful attention to their male and female connectors. Visit www.skybox.com/support/setup for a demonstration video.

4. Install TV antenna (optional)
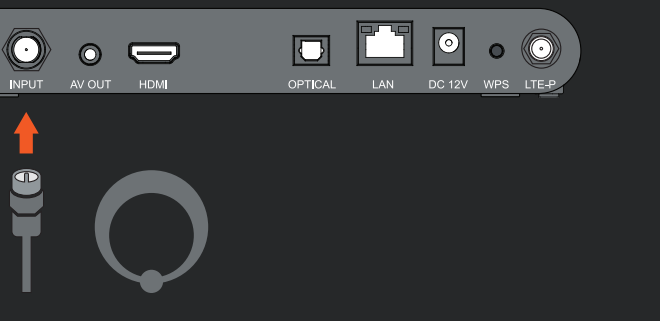
If you plan to receive local broadcast TV channels, install a digital TV antenna by inserting its coax cable into the port labeled INPUT.
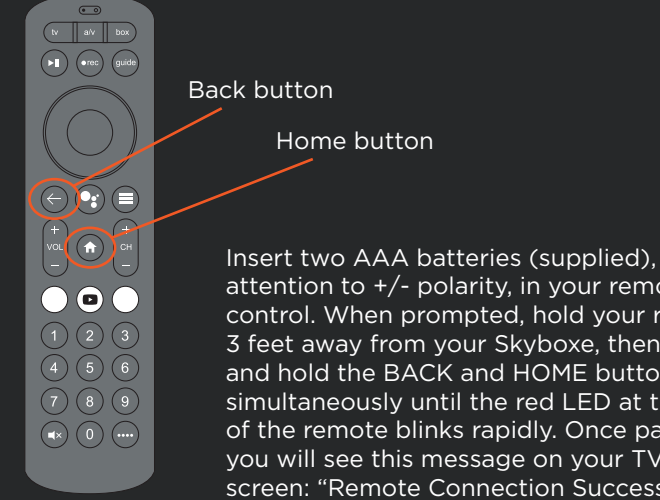
5. Connect to your TV

TV

Connect the supplied HDMI cable to the HDMI output port, then connect it to an HDMI input port on your TV. Make a note as to which input port you've connected it to (HDMI 1, HDMI 2, etc. – we recommend that you use HDMI 1).
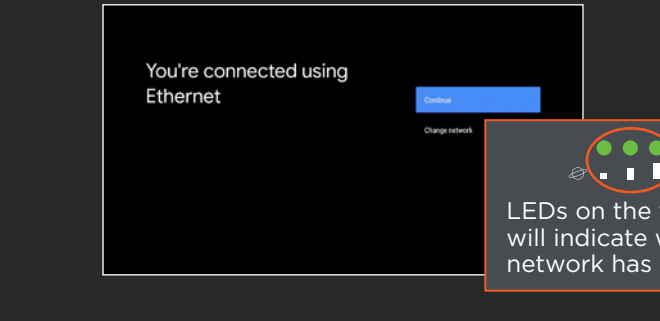
6. Insert power cable
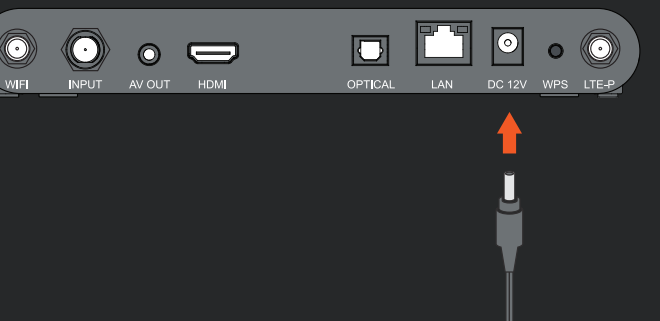
Turn on your TV and set it to the correct input. Insert the supplied power cable (12V, 2A) into the DC 12V input, then plug in to a 110-220V outlet. Allow your Skybox to boot up.

7. Pair your Bluetooth remote

Back button

Home button

Insert two AAA batteries (supplied), paying attention to +/- polarity, in your remote control. When prompted, hold your remote 3 feet away from your Skybox, then press and hold the BACK and HOME buttons simultaneously until the red LED at the top of the remote blinks rapidly. Once paired, you will see this message on your TV screen: "Remote Connection Success!"

8. Follow the on-screen prompts

You're connected using Ethernet

LEDs on the top panel will indicate when a 4G network has connected.

Follow the on-screen prompts to finish the initial setup. Your Skybox will connect automatically to the 4G wireless network – it may take a few seconds or several minutes for a new SIM card to sync up with your carrier's network. Click CONTINUE on the "You're connected using Ethernet" screen. If asked to update your device's software, select YES.

9. Sign in to your Google account

Make the most of your TV
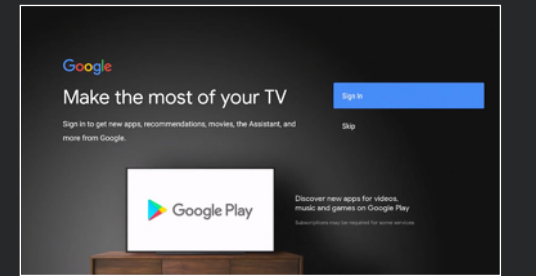
A Google account is required to use any Android TV device. At the appropriate step, sign in to (or create) your Google account and accept Google's terms of service.
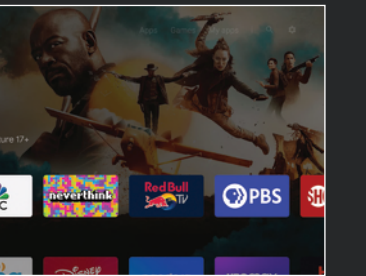
10. Set up your Wi-Fi router
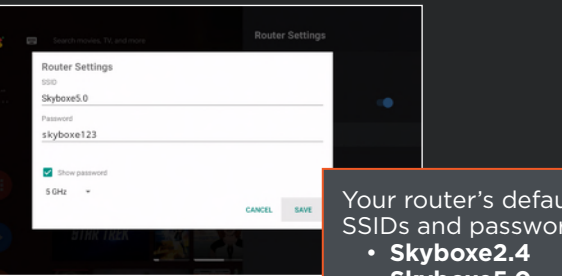
Your router's default SSIDs and passwords are:
- **Skyboxe2.4**
- **Skyboxe5.0**
- pwd = **skyboxe123**

You can change your SSIDs and passwords in the Skyboxe Router Settings menu. For more detailed router configuration instructions, refer to the user manual, which can be found online at www.skyboxe.com/support/setup.

11. Add apps on Google Play

AMC

Google Play brings 5,000+ apps and games to your Skyboxe. Download all your favorite apps and games from Google Play right on your Skyboxe and enjoy them on the big screen. To access, select the red Apps menu, then click the Get More Apps button.

12. Enjoy live TV with Sling (optional)
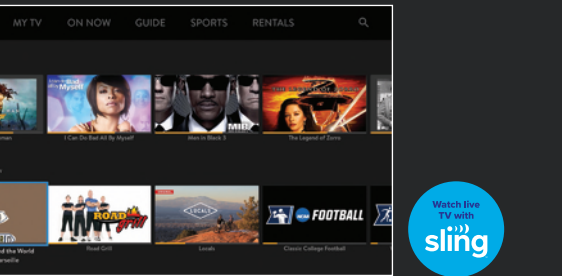
If you connected a digital TV antenna, download and open the Sling for Air TV app and create an account (or sign in). In the Sling app's settings, select OVER THE AIR CHANNELS, then follow the instructions to scan your local TV channels.

Get to know your remote

- Control TV
- Play/pause
- Back
- Google Assistant
- Launch YouTube
- Numeric keys
- Mute audio

- Control Skyboxe
- Control external A/V
- Guide
- Record
- ↑/↓/←/→/OK keys
- Menu
- Home
- Function key
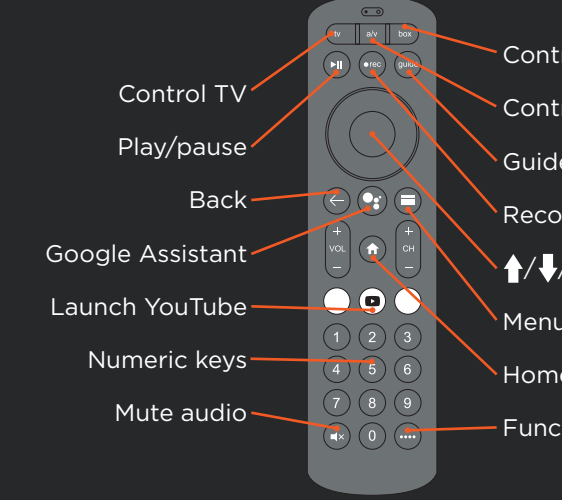
Other important information

A free Sling for AirTV account can be obtained from www.sling.com/airtv. A Sling account is recommended but not required to receive local TV channels. For instructions on how to scan for channels without the Sling for Air TV app, visit our website.

Skyboxe is compatible with Chromecast. You can cast music, photos and videos from your Android smart phone or tablet to your TV via Skyboxe.

Skyboxe is compatible with Wi-Fi Protected Setup (WPS). To activate, press and hold the WPS button on the back panel, releasing when the green LED on the top panel flashes. Then add another WPS-capable device.

Additional information can be found online at: www.skyboxe.com/support/setup.

Skyboxe Hub 4G Quick Start Guide

SKYBOXE